

	FREQUENCY	ITEMS	Whichever comes first ⇒	INITIAL		REGULAR		Refer to page
				MAINTENANCE	MAINTENANCE INTERVAL			
				mi	100	600	1200	
				km	150	1000	2000	
NOTE	HOURS	20	100	200				
NON EMISSION RELATED ITEMS		DRIVE CHAIN	(NOTE1,2)		I,L	[I,L EVERY 300mi (500km) or 50 operating hours]		101 – 103
		DRIVE CHAIN SLIDER				I	I	104
	*	BRAKE FLUID	(NOTE3)			I	I	115 – 117
	*	BRAKE PAD WEAR	(NOTE1,2)				I	118, 119
	*	BRAKE SYSTEM			I	I	I	115 – 121
		SKID PLATES, ENGINE GUARD				I	I	128
	*	CLUTCH SYSTEM			I	I	I	107
	*	SUSPENSION				I	I	25 – 27
	*	SPARK ARRESTER				C	C	130
	*	NUTS, BOLTS, FASTENERS			I		I	–
	**	WHEELS/TIRES			I	I	I	122 – 125
	**	STEERING SHAFT HOLDER BEARINGS					I	–
	**	STEERING SYSTEM					I	–

\* SHOULD BE SERVICED BY YOUR AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SERVICE MANUAL.

\*\* IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY YOUR AUTHORIZED HONDA DEALER.

- NOTES:
1. Service more frequently when riding in dusty areas, sand or snow.
  2. Service more frequently after riding in very wet or muddy conditions.
  3. Replace every 2 years. Replacement requires mechanical skill.