


4. Spray the inside of the fuel tank with an aerosol rust-inhibiting oil. Reinstall the fuel cap.
5. Remove the spark plug and pour one tablespoon (15–20 cc) of clean engine oil into the cylinder. Operate the starter for a few seconds to distribute the oil, then reinstall the spark plug. (Make sure the engine stop switch is OFF () before pressing the starter button.)
6. Remove the battery (page 111) and store it in an area protected from freezing temperatures and direct sunlight and out of the reach of children, slow charge the battery once a month.
7. Wash and dry the FOURTRAX, and wax all painted surfaces.
8. Inflate the tires to their recommended pressures.
9. Place the FOURTRAX on blocks to raise all four tires off the ground.