

STARTING THE ENGINE

Your FOURTRAX is equipped with a gear position starter cut-off system. The engine cannot be started if the transmission is in a forward gear— unless the clutch lever is pulled in.

Preparation

1. Select a level surface and lock the parking brake (page 21) before starting the engine.
2. Turn the fuel valve (1) and ignition switch (2) to ON.
3. Make sure the engine stop switch (3) is at RUN (\odot).
4. Make sure that the transmission is in neutral by checking that the neutral indicator lamp (4) lights.

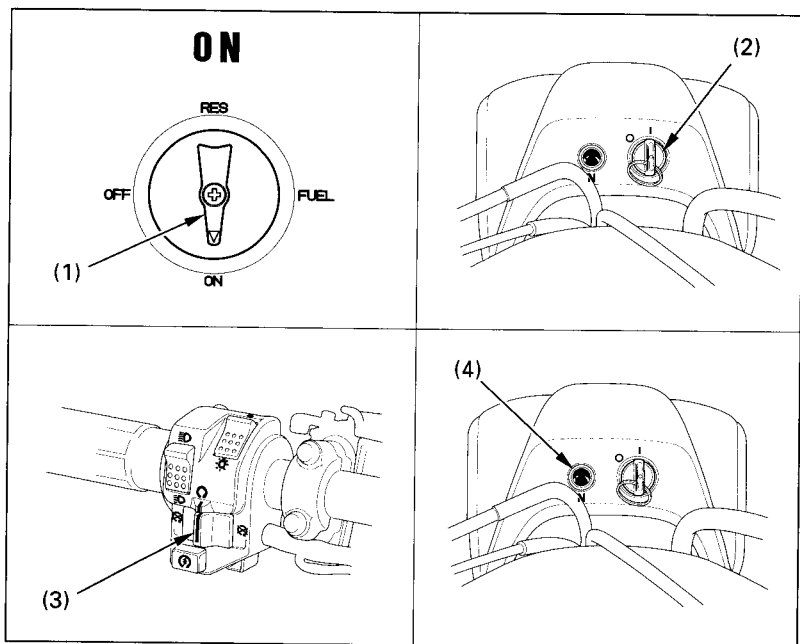


Fig. 3-8

(1) Fuel valve
(2) Ignition switch

(3) Engine stop switch
(4) Neutral indicator lamp