

2. If the cable adjuster is threaded out near its limit or the correct free play cannot be obtained using the cable adjuster (3), a major adjustment must be made. Loosen the lock nut (4) and turn in the cable adjuster (3) completely. Tighten the lock nut (4) and pull on the dust cover (2).

**NOTE:**

If proper adjustment cannot be obtained or the clutch does not work correctly, the cable or clutch friction discs may be worn. See your authorized Honda dealer.

Other Checks:

Check the clutch cable for kinks or signs of wear that could cause sticking or failure. Lubricate the clutch cable with a commercially available cable lubricant to prevent premature wear and corrosion.

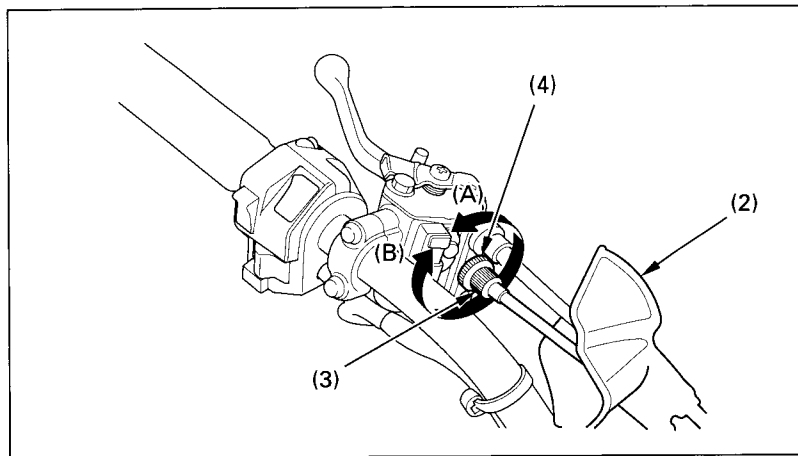


Fig. 4-21 (2) Dust cover (A) Decrease free play  
(3) Clutch cable adjuster (B) Increase free play  
(4) Lock nut