

2. Remove the seat (page 128).
3. Remove the sub fuse box cover.
4. Pull the old fuse out of the clips and push a new fuse into the clips.
5. Reinstall the sub fuse box cover.
6. Install the seat.

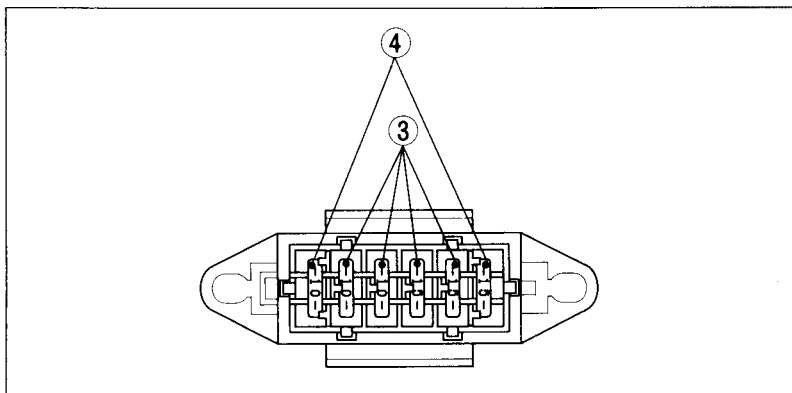


Fig. 4-22

- (3) Sub fuses
(4) Spare fuses

▲ WARNING

POTENTIAL HAZARD

Improperly replacing a fuse.

WHAT CAN HAPPEN

Serious damage to the electrical system, which could cause a fire or a loss of lights or engine power, which could lead to an accident.

HOW TO AVOID THE HAZARD

Never use a fuse with a different rating from that specified in this Owner's Manual.

Do not pry the clips open to get a fuse out, as a loose fuse could cause damage to the electrical system or start a fire.