

If the oil high temperature indicator lamp comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool.

An electric fan is used to automatically provide sufficient air flow through the oil cooler/before the engine oil temperature becomes too high.

CAUTION:

- * Failure to stop the engine immediately after the oil high temperature indicator lamp comes on will adversely affect the service life of the engine.
- * Do not carry or store articles on the front bumper. This may restrict air flow through the engine oil cooler, causing it to overheat.

If the oil high temperature indicator lamp comes on often, have your FOURTRAX inspected by your Honda dealer.

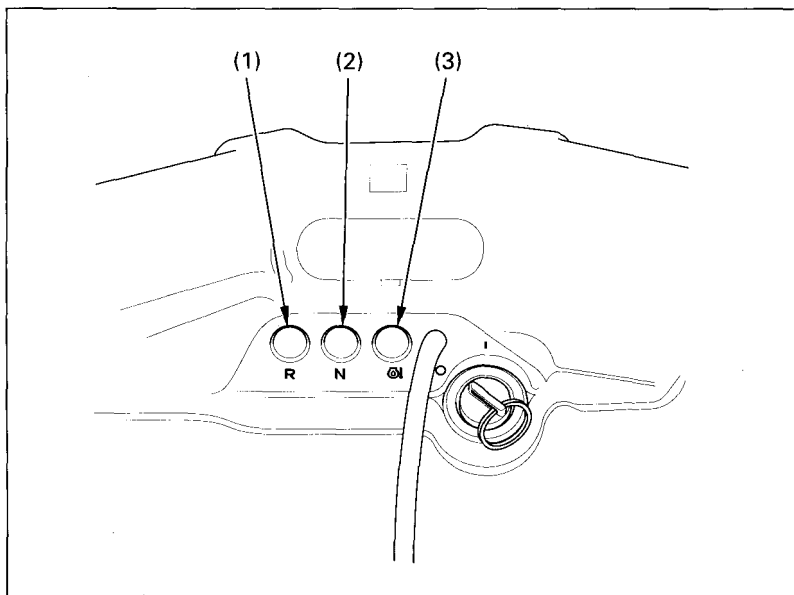


Fig. 2-14 (1) Reverse indicator lamp (3) Oil high temperature indicator lamp
 (2) Neutral indicator lamp