

2. Remove the seat (page 134).
3. Remove the sub fuse box cover.
4. Pull the old fuse out of the clips.
5. Push a new fuse into the clips and install the fuse box cover.
6. Install the seat.

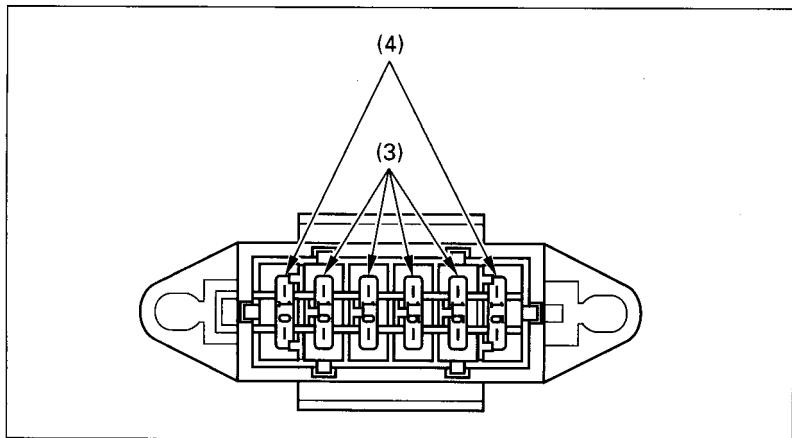


Fig. 4-22 (3) Sub fuses

(4) Spare fuses

## **⚠ WARNING**

### **POTENTIAL HAZARD**

**Improperly replacing a fuse.**

### **WHAT CAN HAPPEN**

**Serious damage to the electrical system, which could cause a fire or a loss of lights or engine power, which could lead to an accident.**

### **HOW TO AVOID THE HAZARD**

**Never use a fuse with a different rating from that specified in this Owner's Manual.**

**Do not pry the clips open to get a fuse out, as a loose fuse could cause damage to the electrical system or start a fire.**