

## Adjusting Idle Speed

### NOTE:

Do not try to compensate for faults in other systems by adjusting the carburetor.

Before adjusting the idle speed and air-fuel mixture, unsnap the right side cover. (Fig. 4-9)

### To adjust the idle speed:

1. Warm up the engine. The engine must be warm for accurate idle adjustment. Ten minutes of stop-and-go riding is sufficient.
2. Adjust idle speed by turning the throttle stop screw (Fig. 4-9).

Idle Speed:

1,400  $\pm$  100 rpm

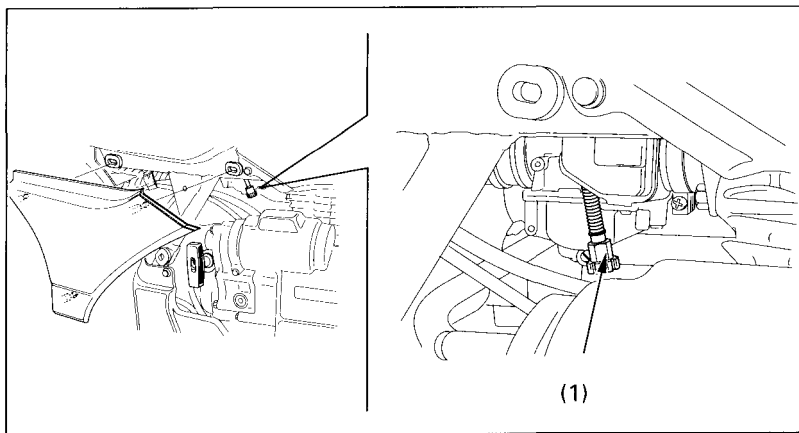


Fig. 4-9 (1) Throttle stop screw