




## Brakes

### Adjustment

#### RIGHT REAR

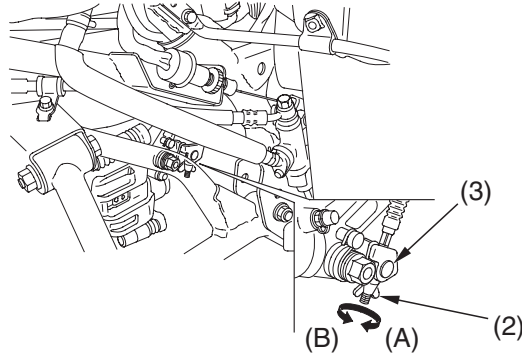

- |                               |                       |
|-------------------------------|-----------------------|
| (2) brake lever adjusting nut | (A) increase freeplay |
| (3) brake arm pin             | (B) decrease freeplay |

Adjust the freeplay of the rear brake lever/parking brake lever with the front wheels pointed straight ahead.

Turn the brake lever adjusting nut (2), located on the brake operating rod at the brake caliper. Make sure the cutout on the adjusting nut is properly seated on the brake arm pin (3).

### Other Inspections

- Check that the brake lever and brake pedal assemblies are positioned properly and the securing bolts are tight.
- Make sure that the brake cables, brake arm, spring, parking brake lock lever, lever bracket and fasteners are in good condition.
- Check for smooth operation of the brake lever and brake pedal. If there is a problem, see your Honda dealer.