

## If Your Engine Quits or Won't Start

| SYMPTOM: Starter motor doesn't operate. |   |
|---|---|
| POSSIBLE CAUSE                          | WHAT TO DO  |
| ignition switch OFF                     | Turn the ignition switch ON.                            |
| engine stop switch OFF                  | Slide the engine stop switch to RUN.                    |
| transmission not in                     | Shift into neutral or squeeze the                       |
| neutral                                 | front brake lever.                                      |
| blown fuse                              | Replace with a new fuse of the                          |
|   | same rating (page200 ).                                 |
| battery lead loose                      | Tighten the battery lead.                               |
| low (or dead) battery                   | Charge the battery (page168).                           |
|   | If charging doesn't help, see your                      |
|   | Honda dealer.   |
| faulty starter motor                    | If all possible causes are negative,                    |
|   | the starter motor may be faulty. See your Honda dealer. |

| SYMPTOM: Starter motor works, but the engine won't start. |   |
|---|---|
| POSSIBLE CAUSE  | WHAT TO DO                              |
| out of fuel   | Fill the fuel tank.                     |
| flooded engine  | See <i>Flooded Engine</i> (page 65 ).   |
| loose or  | Install the spark plug cap securely. If |
| unconnected spark   | the engine still won't start, see your  |
| plug cap  | Honda dealer.                           |
| loose battery cables                                      | Tighten the battery terminal bolts.     |
| weak battery  | Charge the battery (page 168). If       |
| _   | charging doesn't help, see your         |
|   | Honda dealer.                           |