





## If a Fuse Blows

### Main Fuse Access

1. To prevent an accidental short circuit, turn the ignition switch OFF ( ○ ) before checking or replacing the fuses.
2. Remove the seat (page 106 ).
3. Remove the rear fender cover (page 125 ).
4. To access the main fuse ( 2 ) and shift motor fuse ( 3 ), remove the fuse box cover ( 4 ).

### UNDER REAR FENDER COVER

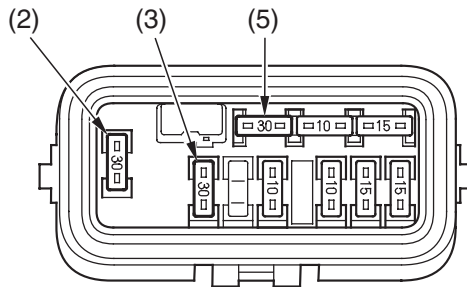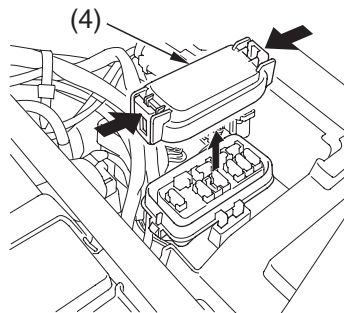

- |                      |                     |
|----------------------|---------------------|
| (2) main fuse        | (4) fuse box cover  |
| (3) shift motor fuse | (5) spare main fuse |

5. Pull the main fuse out.  
If it is blown, install the spare main fuse ( 5 ).