

GEARSHIFT CONTROLS

Gearshift Switches

Two gearshift switches (Fig. 2-22) are located next to the left handlebar grip: upshift (\uparrow) and downshift (\downarrow).

Your FOURTRAX has five forward gears: 1, 2, 3, 4, and 5.

To upshift the transmission, press the upshift switch (1) once.

To downshift the transmission, press the downshift switch (2) once.

(For complete operational instructions, see page 71).

NOTE:

- * The transmission cannot be upshifted from neutral to first gear or neutral to reverse when the engine speed is above 3,000 rpm or the ground speed is above 6 mph (10 km/h).
- * The transmission cannot be downshifted from 1st gear to neutral when the ground speed is above 2 mph (3 km/h).

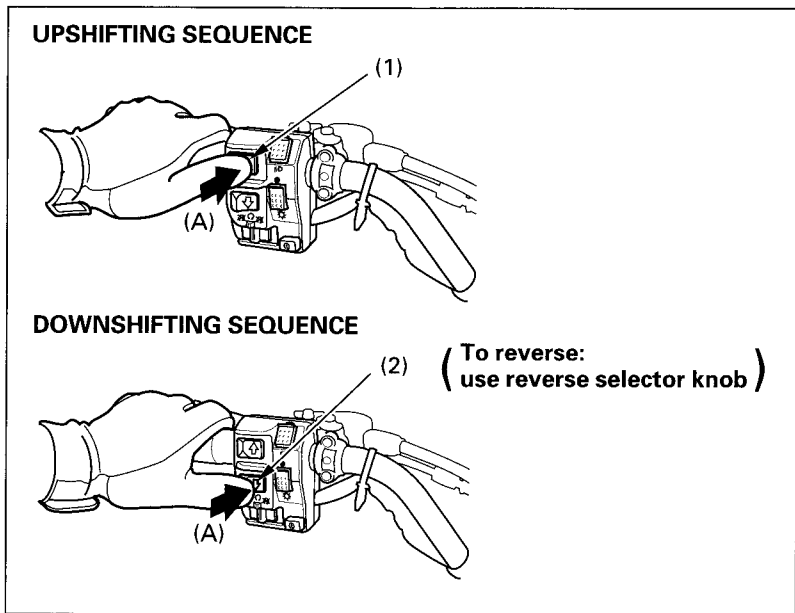


Fig. 2-22 (1) Upshift switch (A) Push
(2) Downshift switch