

2. Remove the seat (page 146).
3. Remove the fuse case (1).
4. Open the fuse case cover (2).
5. Replace the old fuse.
6. Reinstall the fuse case cover and fuse case.
7. Install the seat.

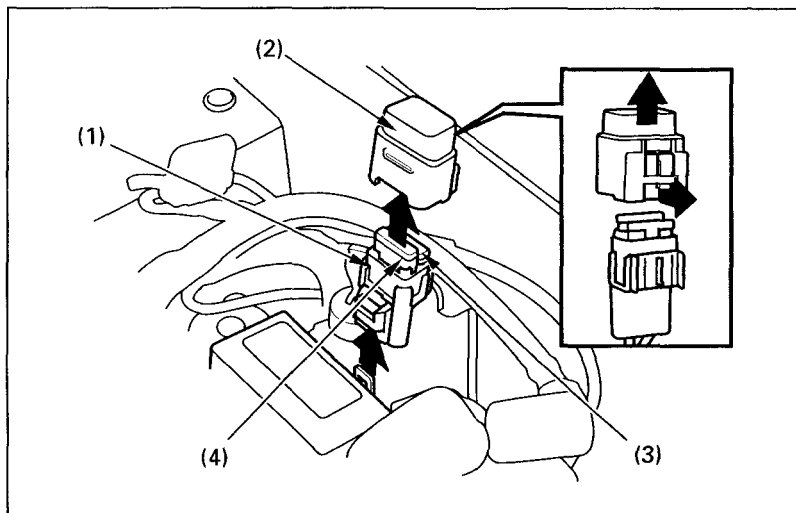


Fig. 4-21 (1) Fuse case (2) Fuse case cover (3) Spare fuse (4) Main fuse

To replace the main fuse (Electric shift motor):

1. Make sure the ignition switch is ○ (OFF).

**CAUTION:**

**Turn the ignition switch ○ (OFF) before checking or replacing the fuse to prevent accidental short-circuiting which could damage the electrical system.**