

## GEARSHIFT CONTROLS

### Gearshift Switches

Two gearshift switches (Fig. 2-23) are located next to the left handlebar grip: upshift (  $\uparrow$  ) and downshift (  $\downarrow$  ).

Your FOURTRAX has five forward gears: 1, 2, 3, 4, and 5.

To upshift the transmission, press the upshift switch ( 1 ) once.

To downshift the transmission, press the downshift switch ( 2 ) once.

(For complete operational instructions, see page 71 ).

### NOTE:

- \* The transmission cannot be upshifted from neutral to first gear or neutral to reverse when the engine speed is above 3,000 rpm or the ground speed is above 6 mph (10 km/h).
- \* The transmission cannot be downshifted from 1st gear to neutral when the ground speed is above 2 mph (3 km/h).

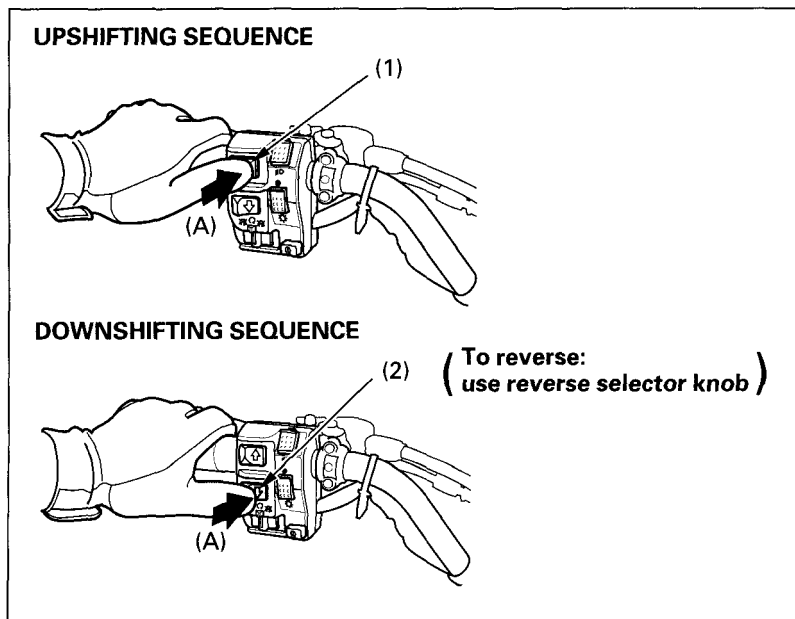


Fig. 2-23

(1) Upshift switch  
(2) Downshift switch

(A) Push