

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS		FREQUENCY	WHICHEVER COMES FIRST ↕ NOTE	INITIAL MAINT.		REGULAR MAINT. INTERVAL		Refer to page	
				mi	km	600	1200		
				20	150	1000	2000		
				HOURS	20	100	200		
EMISSION RELATED ITEMS	*	FUEL LINE					I	--	
	*	THROTTLE OPERATION					I	124	
	*	CARBURETOR CHOKE					I	126	
		AIR CLEANER	NOTE 1				C	C	119
		AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	123
		SPARK PLUG					I	I	130
	*	VALVE CLEARANCE					I	I	133
		ENGINE OIL					R	R	109
		ENGINE OIL FILTER					R	R	112
	*	ENGINE IDLE SPEED					I	I	129

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 208).