

# Indicators & Displays

---

6	Minute select button	Advances the minutes displayed by the digital clock (page 22 ).
7	Hour select button	Advances the hour displayed by the digital clock (page 22 ).
8	Hourmeter/digital clock select button	Selects display of the hourmeter or digital clock (pages 21 , 22 ).
9	Odometer/tripmeter select button	Selects display of the odometer or tripmeter. Resets the tripmeter to zero (0) (page 20 ).