Maintenance Schedule

	$\overline{}$		WHICHEVER		INITIAL	REGULAR		
FREQUENCY			COMES		MAINT.			1
			FIRST mi			MAINT. INTERVAL		.
ITEMS			rinoi		100	600	1200	Refer to
TILIVIO				km	150	1000	2000	page
NON EMISSION RELATED ITEMS	DRIVESHAFT BOOTS		NOTE	HOURS	20	100	200	
	\vdash						<u> </u>	152
		REAR FINAL GEAR				(R:EVERY	1	111, 113
		CASE OIL AND				2 YEARS)		
	-	DIFFERENTIAL OIL						
	*	BRAKE FLUID	NOTE 3				I	131
	*	BRAKE SHOE WEAR	NOTE 1					142
	L.	BRAKE SYSTEM			1	1		131
	*	REVERSE LOCK	ì				1	124
	1	SYSTEM						
		SKID PLATES, ENGINE				T		151
	Ι.	GUARD			ļ))
	*	CLUTCH SYSTEM			1	1	Ī	123
	*	SUSPENSION						
	*	SPARK ARRESTER				С	С	130
	*	NUTS, BOLTS,			Ī		1	_
		FASTENERS	ļ	J		}		
	**	WHEELS/TIRES			ī	1	1 1	144
	**	STEERING SHAFT					i	
		HOLDER BEARINGS					İ	
	**	STEERING SYSTEM						-

^{*} Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 210).

^{**} In the interest of safety, we recommend these items be serviced only by your Honda dealer.