


Seat Removal

Refer to *Safety Precautions* on page 89 .

The seat must be removed for the air cleaner, battery and fuse maintenance.

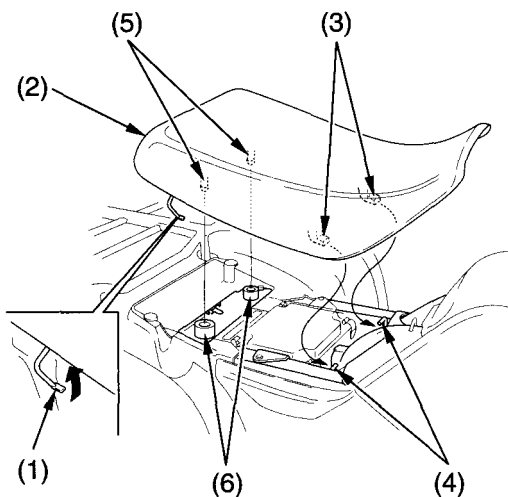

(1) seat lock lever

(2) seat

(3) front prongs

(4) hooks

(5) studs

(6) grommets

Removal

1. Pull the seat lock lever (1) at the right side of the seat.
2. Pull the rear of the seat (2) up and slide the seat back.

Installation

1. Insert the front prongs (3) into the hooks (4) on the frame and press the studs (5) into the grommets (6) on the battery holder.
2. Press down on the seat until locks.