

Indicators & Displays

6	Minute select button	Advances the minutes displayed by the digital clock (page 21).
7	Hour select button	Advances the hour displayed by the digital clock (page 21).
8	Hourmeter/digital clock select button	Selects display of the hourmeter or digital clock (pages 20 , 21).
9	Odometer/tripmeter select button	Selects display of the odometer or tripmeter. Resets the tripmeter to zero (0) (page 19).