


# Air Cleaner

---

## Cleaning

1. Remove the seat by pulling the seat lock lever ( 1 ) up (page 98 ).

### UNDER SEAT

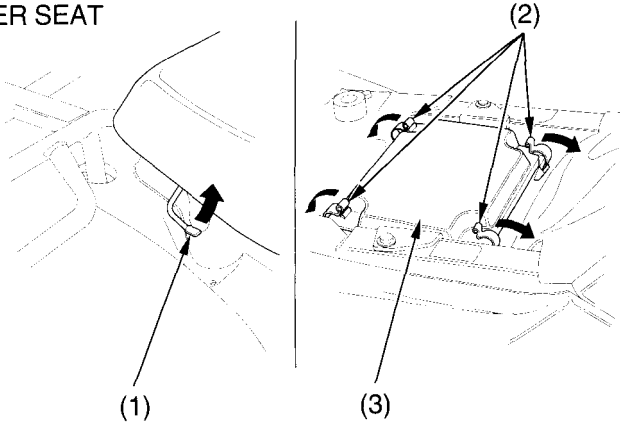

- (1) seat lock lever  
(2) retainer clips

- (3) air cleaner housing cover

2. Unlatch the four retainer clips ( 2 ).
3. Remove the air cleaner housing cover ( 3 ).