



## High Coolant Temperature Indicator

CENTRE OF HANDLEBAR

TRX450ER

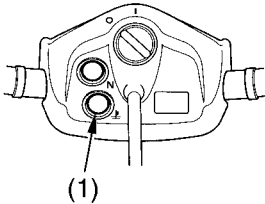

TRX450R

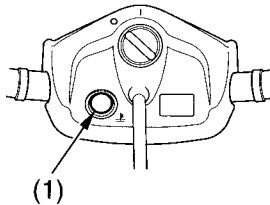

(1) high coolant temperature indicator

Lights when the engine coolant temperature is high enough to adversely affect the service life of the engine.

If the high coolant temperature indicator ( 1 ) comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See page 189.

### Lamp Check (TRX450ER)

The high coolant temperature indicator comes on for a few seconds and then goes off when you turn the ignition switch to ON ( I ).

### (TRX450R)

The engine is started when you operate the kickstarter, you can see the indicator comes on at the same time. If the engine is running, the indicator will go off after a few seconds. If the engine is stopping, the indicator will go off at the same time.

If the indicator does not come on when it should, have your Honda dealer check for a burned-out bulb or other problems.