


Starting & Stopping the Engine

Preparation

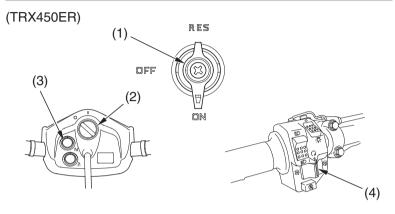

- (1) fuel valve
- (2) ignition switch
- (3) neutral indicator
- (4) engine stop switch
- 1. Before starting, select a level surface and lock the parking brake (page 25).
- 2. Turn the fuel valve (1) and ignition switch (2) to ON (|).

Confirm the following:

- The transmission is in neutral, and the neutral indicator (3) is ON.
- The engine stop switch (4) is set to RUN (\bigcirc) .

The high coolant temperature indicator should go off a few seconds after the ignition switch to ON (\parallel).

48 Basic Operation & Riding

