

## PARTS OPERATION

### POWER CONTROLS

#### Ignition Switch

The ignition switch (Fig. 2-5) is in the center of the handlebars directly in front of the seat.

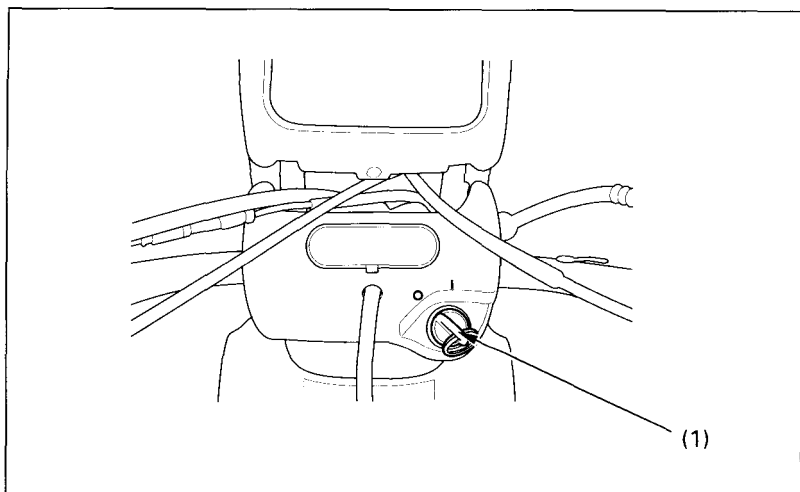


Fig. 2-5

(1) Ignition switch

Key Position	Function	Key Removal
OFF ( O )	The engine and headlight cannot be operated.	The key can be removed.
ON ( I )	The headlights and assist headlight can be turned on.  With the engine stop switch at RUN and the transmission in neutral, the engine can be started.	The key cannot be removed.