

## **WHEELS AND TIRES**

### **WHEEL REMOVAL**

If you need to remove a wheel from your FOURTRAX, follow these procedures:

1. Raise the front (or rear) wheels off the ground and place a support securely under the vehicle.
2. Loosen the wheel nuts (Fig. 4-33) with a 17 mm socket wrench.
3. Remove the wheel.

When reinstalling a wheel, tighten the wheel nuts in a crisscross (rather than a circular) pattern.

Wheel nuts torque:

47 lbf-ft (64 N·m , 6.5 kgf-m)

Be sure the tapered side of the wheel nuts face the wheel rim (2).

### **⚠ WARNING**

#### **POTENTIAL HAZARD**

**Installing wheels improperly.**

#### **WHAT CAN HAPPEN**

**A wheel may come loose, possibly leading to an accident.**

#### **HOW TO AVOID THE HAZARD**

**Carefully follow the instructions in this Owner's Manual when installing wheels.**