

### Drive Mode Indicator

The drive mode indicator ( 1 ) (Fig. 2-16) shows the selected drive mode when the ignition switch is in the ON ( I ) position.

The indicator shows: LOW, D1, D2, and ESP (page 36 ).

LOW indicator will be displayed when the gearshift lever is in Low ( L ) in the ESP mode.

### Gear Position Indicator

The gear position indicator ( 2 ) (Fig. 2-16) shows the gear position when the ignition switch is in the ON ( I ) position.

The indicator displays: N for neutral, R for reverse, D for drive, L for low, and 1 – 5 for the five forward speed positions in the ESP mode.

“--” will be displayed on the gear position indicator when the transmission is not shifted into gear properly. Before riding, check that the gear position is displayed on the gear position indicator properly.

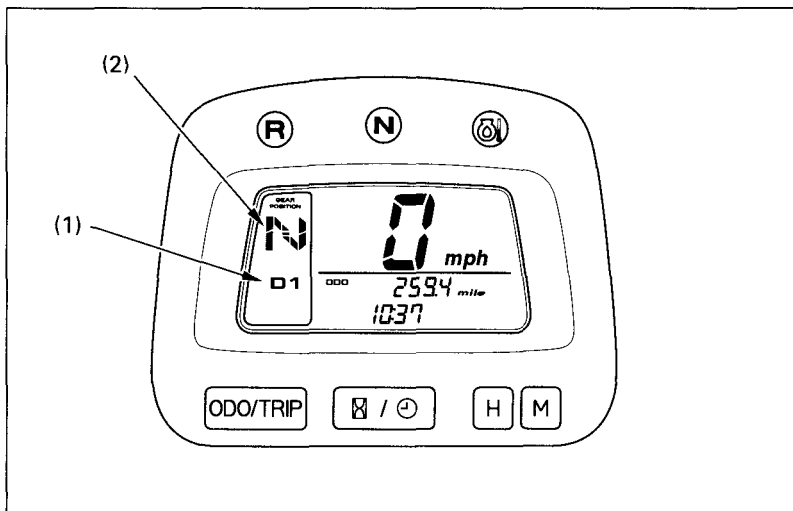


Fig. 2-16

- (1) Drive mode indicator
- (2) Gear position indicator