

## Odometer/Tripmeter

### Odometer

When selected, the odometer (1) (Fig. 2-18) registers total distance traveled in miles while the ignition is ON ( I ). To change the display (2) from tripmeter to odometer, press and release the Odometer/Tripmeter select button (3).

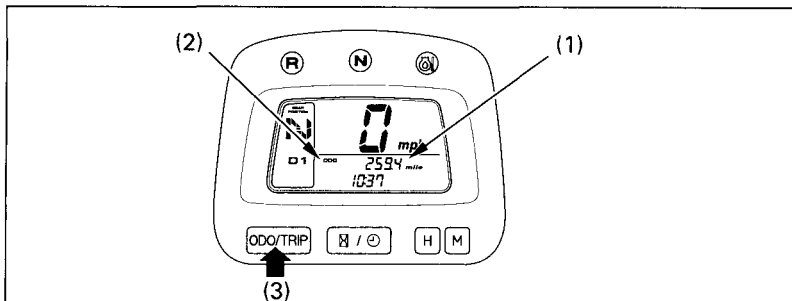


Fig. 2-18 (1) Odometer (3) Odometer/Tripmeter select button  
(2) "ODO" display

### Tripmeter

When selected, the tripmeter (1) (Fig. 2-19) shows mileage per trip while the ignition is ON ( I ). To change the display (2) from odometer to tripmeter, press and release the Odometer/Tripmeter select button (3). To reset the tripmeter to zero, press the Odometer/Tripmeter select button and hold it in for at least two seconds.

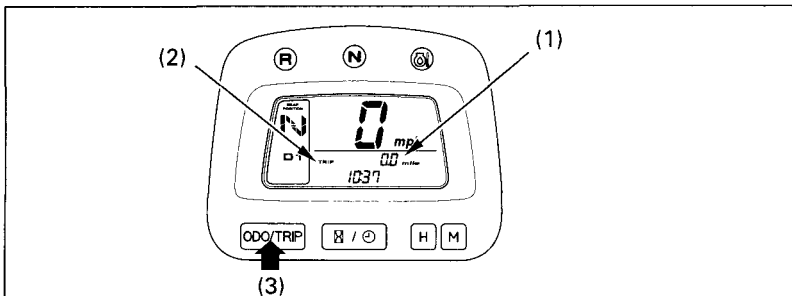


Fig. 2-19 (1) Tripmeter (3) Odometer/Tripmeter select button  
(2) "TRIP" display