

## Digital Clock

When selected, the digital clock (1) (Fig. 2-21) shows the time while the ignition is ON ( I ). To change the display from hourmeter to digital clock, press and release the hourmeter/digital clock select button (2).

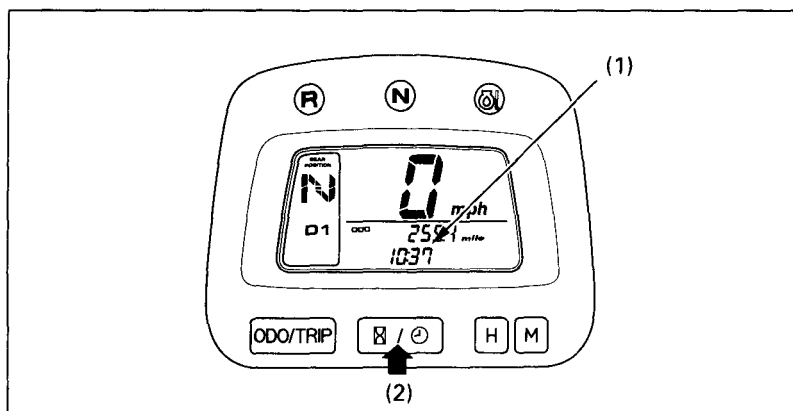


Fig. 2-21 (1) Digital clock  
(2) Hourmeter/digital clock select button