

## PARTS OPERATION

### POWER CONTROLS

#### Ignition Switch

The ignition switch (Fig. 2-5) is in the center of the handlebars directly in front of the seat.

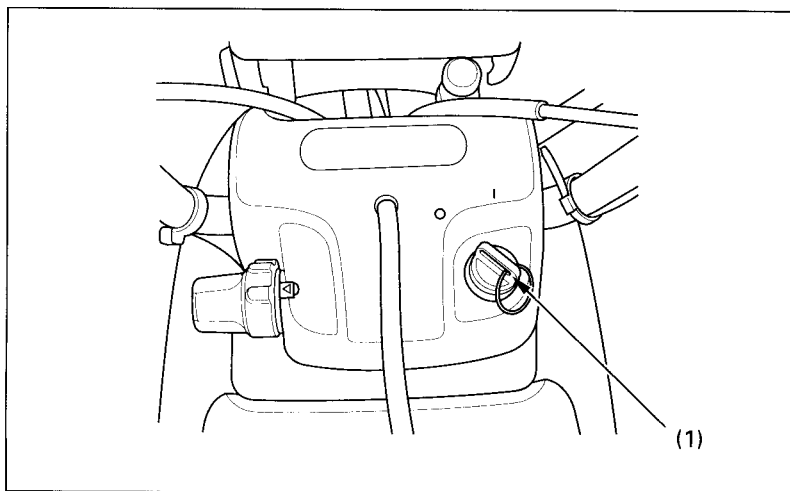


Fig. 2-5

(1) Ignition switch

| Key Position | Function  | Key Removal                |
|--------------|---|----------------------------|
| ○<br>(OFF)   | The engine and headlight cannot be operated.  | The key can be removed.    |
| I<br>(ON)    | The headlights and assist headlight can be turned on.<br><br>With the engine stop switch at RUN and the transmission in neutral, the engine can be started. | The key cannot be removed. |