

## Battery Removal

1. Make sure the ignition switch is ○ (OFF).
2. Remove the seat (page 155).
3. Remove the rear fender lid (1) (Fig. 4-21).
4. Release the rings and remove the rubber band (2). (Fig. 4-22)
5. Disconnect the negative (−) terminal lead (3) from the battery (4) first, then disconnect the positive (+) terminal lead (5).
6. Remove the battery.
  - \* Install in the reverse order of removal.
  - \* Check all bolts and other fasteners are secure.
  - \* After installing the battery, check to see if the battery cables are routed correctly.

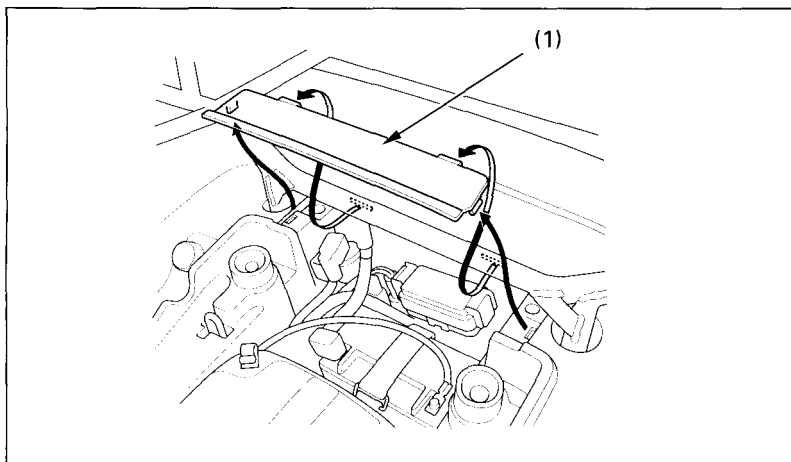


Fig. 4-21 (1) Rear fender lid