

Indicators & Displays

Digital Clock

Shows hour and minute while the ignition is ON (I).

To change the display, press and release the hourmeter/digital clock (mode) select button (1).

To adjust the time manually, proceed as follows:

1. Turn the ignition switch ON (I).
2. To advance the hour display one unit at a time, press and release the hour select (plus) button (2).

To advance the hour display automatically, press and hold the hour select (plus) button. After two seconds, the hour display will begin advancing. Release the button when the display reaches the desired hour.

3. To advance the minute display one unit at a time, press and release the minute select (minus) button (3).

To advance the minute display automatically, press and hold the minute select (minus) button. After two seconds, the minute display will begin advancing. Release the button when the display reaches the desired minute.