


# Indicators & Displays

---

4. Press the hourmeter/digital clock select button when the display reaches the desired hour appears. The minutes display will be flashing.

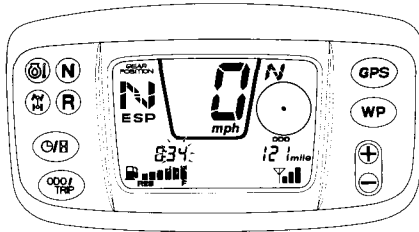

5. To advance the minute display one unit at a time, press and release the plus button or minus button.  
To advance the minute display automatically, press and hold the plus button or minus button. After two seconds, the minute display will begin advancing. Release the button when the display reaches the desired minute.
6. Press the hourmeter/digital clock select button when the display reaches the desired minutes appears. The display will stop flashing.
- Your ATV's digital clock has an automatic adjustment function whenever the GPS mode is selected and the system's satellite status is 3D Navigation (page 74 ).