

# Shifting Gears


---

Two gearshift switches are located next to the left handlebar grip: upshift ( ⬆ ) and downshift ( ⬇ ).


To upshift the transmission, press the upshift switch (4) once.

To downshift the transmission, press the downshift switch (5) once.

## UPSHIFTING SEQUENCE

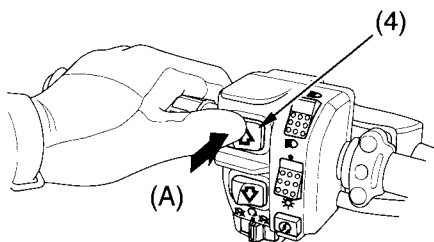

## DOWNSHIFTING SEQUENCE

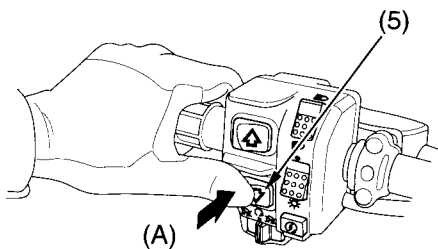

(4) upshift switch

(5) downshift switch

(A) press