


# Controls & Features




## Start Button

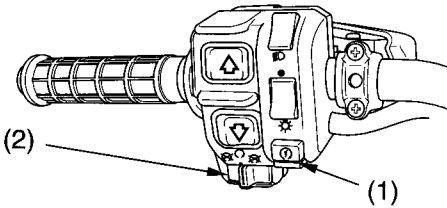

 
### LEFT HANDLEBAR



- (1) start button  
(2) engine stop switch

 
 
 
-  START  
 OFF  
 RUN

 


The start button (1) is used for starting the engine. Pushing the button in starts the engine. See *Starting Procedure*, page 69.

When the start button is pushed, the starter motor will crank the engine. The starter motor will not operate if the engine stop switch is in the OFF (  ) position when the start button is pushed.

## Engine Stop Switch



The engine stop switch (2) is used to stop the engine in an emergency. To operate, slide the switch to the OFF (  ) position. The switch must be in the RUN (  ) position to start the engine, and it should normally remain in the RUN (  ) position even when the engine is OFF.

If your ATV is stopped with the ignition switch ON (  ) and the engine stop switch OFF (  ), the battery will discharge. Turn the ignition switch OFF (  ) to prevent battery discharge.