


# Air Cleaner

---


## Cleaning

1. Remove the seat by pulling the seat lock lever ( 1 ) up (page 104).

### UNDER SEAT

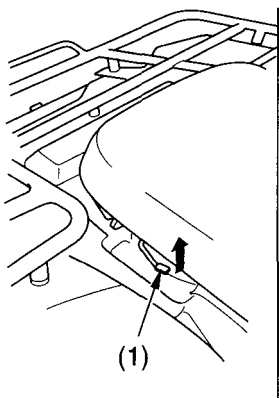

- (1) seat lock lever  
(2) retainer clips

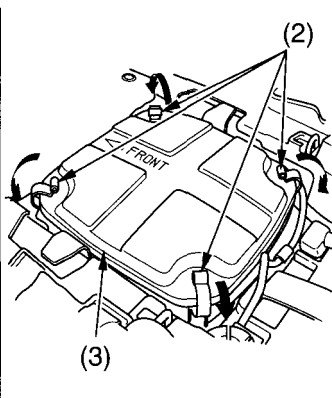

- (3) air cleaner housing cover

2. Unlatch the retainer clips ( 2 ).
3. Remove the air cleaner housing cover ( 3 ).