



Is Your ATV Ready to Ride?

| | |
|---|--|
| <i>Tires</i> | Use a gauge to check the air pressure. Adjust if needed. Also look for signs of damage or excessive wear (page 156). |
| <i>Drivetrain Boots</i> | Check for damage (page 161). |
| <i>Guards</i> | Check for damage (page 160). |
| <i>Nuts & Bolts</i> | Check the wheels to see that the axle nuts are tightened. Use a wrench to make sure all accessible nuts, bolts, and fasteners are tight. |
| <i>Underbody & Exhaust System</i> | Check for, and remove, any dirt, vegetation or other debris that could be a fire hazard or interfere with the proper operation of the vehicle. |
| <i>Air Cleaner Housing Drain Tube</i> | Check for deposits in the drain tube. If necessary, clean the tube (page 128) and check the air cleaner housing. |
| <i>Leaks, Loose Parts</i> | Walk around your ATV and look for anything that appears unusual, such as a leak or loose cable. |
| <i>Cable</i> | Check the cable housings for wear. Check the fittings for looseness. Replace or tighten as needed. |
| <i>Lights</i> | Make sure the headlight, brakelight and taillight are working properly. |
| <i>If you are carrying cargo, also check the following:</i> | |
| <i>Loading Limits</i> | Make sure you do not exceed the load limits (page 55). |

52 Before Riding

