

# Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		↔	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
	REAR FINAL GEAR CASE OIL				(EVERY 2 YEARS)		105
*	BRAKE FLUID	NOTE 3					125
*	BRAKE SHOE WEAR	NOTE 1					133
*	BRAKE PADS WEAR	NOTE 1, 2					128
*	BRAKE LIGHT SWITCH						134
	BRAKE SYSTEM						125
*	REVERSE LOCK SYSTEM						117
	SKID PLATES, ENGINE GUARD						143
*	CLUTCH SYSTEM						116
*	SUSPENSION						-
*	SPARK ARRESTER				C	C	123
*	NUTS, BOLTS, FASTENERS						-
**	WHEELS/TIRES						-
**	STEERING SHAFT HOLDER BEARINGS						
**	STEERING SYSTEM						-

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 198).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.