


# Controls & Features

---

## Gearshift Switch

Two gearshift switches are used in the ESP (manual shift) mode. These switches are used to select the next higher or lower gear in the transmission. To operate, press the upshift switch to engage the next higher gear or press the downshift switch to engage the next lower gear. See *Shifting Gears*, page 70.

### LEFT HANDLEBAR

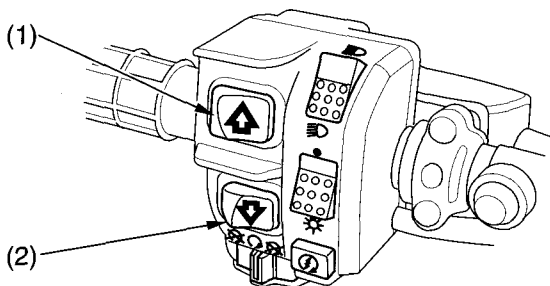

(1) upshift switch

(2) downshift switch