


Brakes

Draining Water from Brakes

Refer to *Safety Precautions* on page 97 .

FRONT

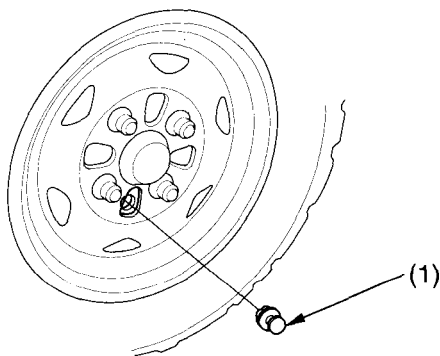

(1) front brake inspection hole plug

1. Make sure the engine is off and the parking brake is set.
 2. Remove the front brake inspection hole plug (1).
- If any water drains, the brake seals must be replaced by your Honda dealer as soon as possible.