

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
		↔	mi	100	600	1200	
			km	150	1000	2000	
		NOTE	HOURS	20	100	200	
EMISSION RELATED ITEMS	* FUEL LINE					I	—
	* THROTTLE OPERATION					I	166
	* CARBURETOR CHOKE					I	168
	AIR CLEANER	NOTE 1			C	C	161
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2			I	I	165
	SPARK PLUG					I	170
	* VALVE CLEARANCE				I	I	173
	ENGINE OIL			R	R	R	144
	ENGINE OIL FILTER			R	R	R	149
	* ENGINE IDLE SPEED			I	I	I	169
	RADIATOR COOLANT	NOTE 3			I	I	156
	* COOLING SYSTEM	NOTE 2			I	I	—

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 252).