


Brakes

Draining Water from Brakes

Refer to *Safety Precautions* on page 129.

FRONT

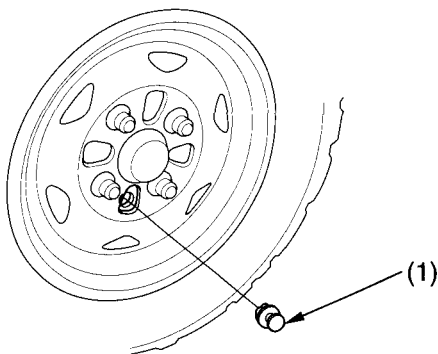

(1) front brake inspection hole plug

1. Make sure the engine is off and the parking brake is set.
 2. Remove the front brake inspection hole plug (1).
- If any water drains, the brake seals must be replaced by your Honda dealer as soon as possible.