




# Air Cleaner

## Cleaning

1. Remove the seat by pulling the seat latch (1) up.

UNDER SEAT

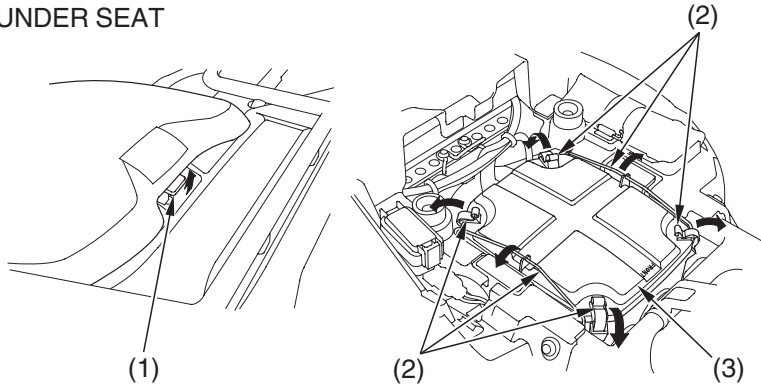

(1) seat latch  
(2) retainer clips

(3) air cleaner housing cover

2. Unlatch the retainer clips (2).
3. Remove the air cleaner housing cover (3).

