

# If the Transmission Is Not Functioning Properly

---

## **Manual Shift (ESP) Mode:**

If one or both shift switches do not function, stop riding your ATV in the ESP mode. Switch to riding in the AUTO (automatic shift) mode. Have your ATV inspected and repaired by your Honda dealer.

## **Automatic Shift (Auto) Mode:**

When the automatic transmission is not shifting properly, the gear position indicator will show “- -” and blink.

See your Honda dealer to check and restore the automatic transmission.

If the gear position indicator shows “- -” and blinks while riding, perform the following:

1. Stop the ATV.
2. Turn the ignition switch to the “OFF” ( O ) position.
3. After the engine stops, turn the ignition switch to the “ON” ( I ) position.
4. Check the gear position indicator.

## When the “- -” is blinking on the gear position indicator:

Restart the engine; drive the vehicle to a location where it can be loaded and transported to a Honda dealer.

## When the display on the gear position indicator returns to normal:

You may drive the vehicle as usual after restarting the engine. However, we urge you to have your ATV inspected by your Honda dealer.

(cont'd)