

# Indicators

---

## Lamp Check

The PGM-FI indicator and high coolant temperature indicator come on for a few seconds and then go off when you turn the ignition switch ON ( I ) and engine stop switch is on RUN ( Q ).

The reverse indicator comes on for a few seconds and then goes off when you turn the ignition switch ON ( I ) and engine stop switch is on RUN ( Q ) except transmission is in reverse. When the transmission is in reverse, remain on until you shift out of reverse.

The indicators are identified in the table on page 19 with the words:  
*Lamp Check.*

When applicable, the neutral indicator comes on when you turn the ignition switch ON ( I ) and remains on until you shift out of neutral.

If one of these indicators does not come on when it should, have your Honda dealer check for burned-out bulbs or other problems.