

# Engine Oil & Filter

## Checking & Adding Engine Oil


Refer to *Safety Precautions* on page 81 .

Check the engine oil level each day before operating your ATV and add if needed.

*Before riding your ATV, check the engine oil level.*

1. Park your ATV on a firm, level surface.
2. Remove the oil fill cap/dipstick ( 1 ) from the oil tank ( 2 ) and wipe it clean.
3. Insert the oil fill cap/dipstick without screwing it in, then remove the oil fill cap/dipstick and check the oil level.
  - If the oil level is above the lower level mark ( 3 ) on the oil fill cap/ dipstick, install the oil fill cap/dipstick, and proceed to the *Oil Tank Level Check* (page 101 ).
  - If the oil level is below the lower level mark on the oil fill cap/ dipstick, install the oil fill cap/dipstick, and proceed to the *Crankcase Oil Level Check* (page 100).

RIGHT SIDE

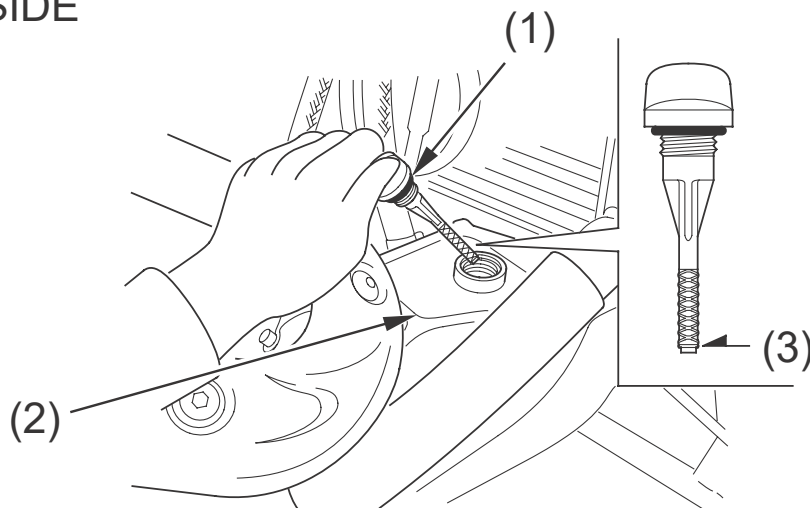

(1) oil fill cap/dipstick  
(2) oil tank

(3) lower level mark

(cont'd)