## **Spark Plug Recommendation**

standard spark plug	ZFR7F-11 (NGK) or
	KJ22CR-L11 (DENSO)

Use only the recommended type of spark plug in the recommended heat range.

## **NOTICE**


Using spark plugs with an improper heat range can cause engine damage.

## **Spark Plug Inspection & Replacement**

Refer to Safety Precautions on page 81.

- 1. Clean any dirt from around the spark plug base.
- 2. Disconnect the spark plug cap (1). Take care to avoid damaging the spark plug wire when disconnecting the cap.
- 3. Using a spark plug wrench provided in the tool kit, remove the spark plug.



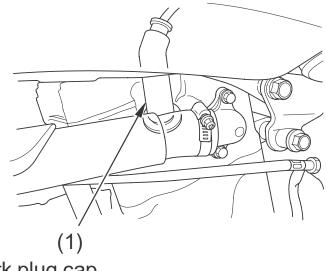

(1) spark plug cap

(cont'd)