Spark Arrester


Refer to Safety Precautions on page 81.

The exhaust system must be periodically purged of accumulated carbon.

To purge the system:

- 1. Allow the engine and muffler to cool.
- 2. Remove the bolts (1), the spark arrester (2) and the gasket (3) from the muffler (4).

REAR

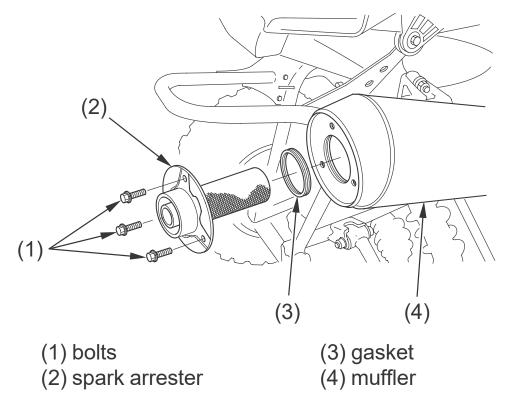

(cont'd)