


## AIR CLEANER

The air cleaner element accumulates dust and must be cleaned periodically. If the FOUR TRAX is ridden in unusually dusty areas, the element must be cleaned at more frequent intervals than specified in the MAINTENANCE SCHEDULE. To clean the filter element:

1. Remove the cap nut (1) and air cleaner cover (2).
2. Remove the filter element (3) from the air cleaner case.
3. Remove air filter element tube (4) and support (5) from the filter element.
4. Wash the element in a non-flammable or high flash-point solvent. Allow it to dry thoroughly.

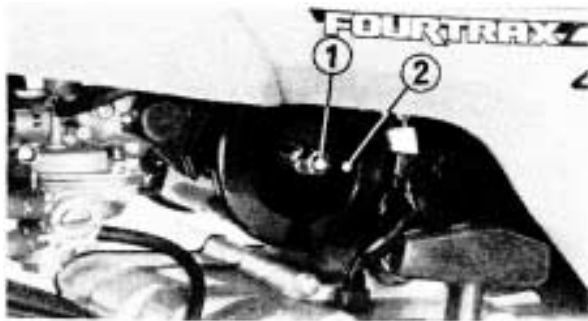


(1) Cap nut (2) Air cleaner cover

### WARNING

\* *Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.*

Soak the filter element in clean gear oil (SAE 80–SAE 90) until saturated, then squeeze out the excess oil.

Reassemble in the reverse order of disassembly.

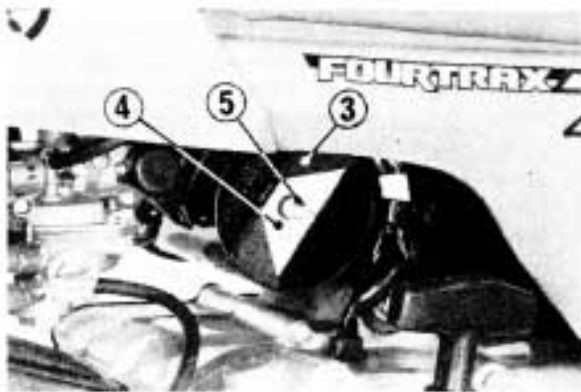

(3) Filter element (5) Filter element tube  
(4) Support