

5. Throttle.

Check the free play.

Check for smooth opening and closing in all steering positions.

If the throttle needs adjustment, see page 120.

