


If a Fuse Blows

Main Fuse Access

UNDER SEAT

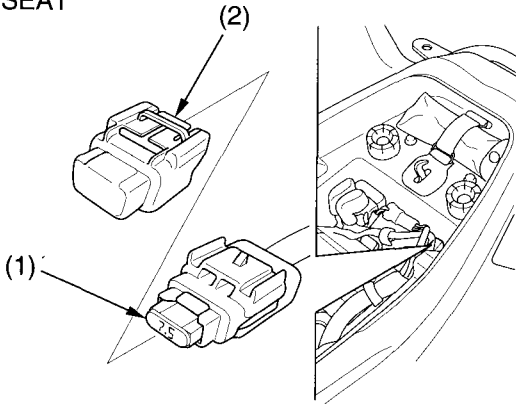

(1) fuse

(2) fuse case cover

1. To prevent an accidental short circuit, turn the ignition switch OFF (\bigcirc) before checking or replacing the fuse.
2. To access the fuse (1), remove the seat (page 95).
3. Remove the fuse case cover (2).
4. Replace the old fuse.
5. Reinstall the fuse case cover.
6. Install the seat.