


Brakes

Adjustment

REAR

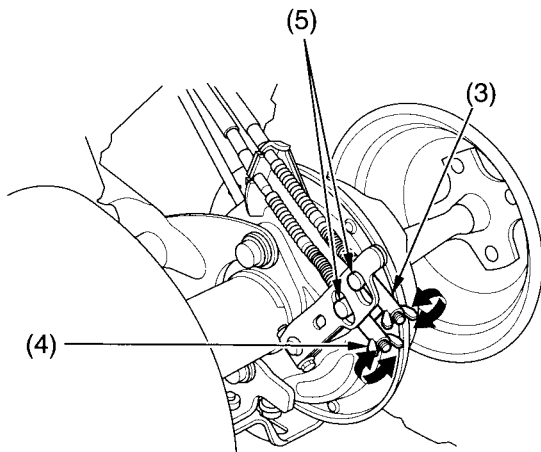

(3) brake lever adjusting nut
(4) brake pedal adjusting nut

(5) brake arm pins

Turn the brake lever adjusting nut (3) and the brake pedal adjusting nut (4), located on the brake operating rod at the rear of the frame. Make sure the cutout on the adjusting nut is properly seated on the brake arm pin (5).